

DIRECTIONS FOR USE

FOR THE CATTLE-STUNNING APPARATUS "BLITZ"

=====

A) Loading and Use

1. Unscrew the head-piece (201), set in the cartridge (central fire, cal. 9 x 17 mm) with the percussion cap on high. The power of the cartridge-load is marked by coloured rings on the percussion cap.

green	-	light	for pigs and small cattle
yellow	-	middle	for cows, horses, small oxen
blue	-	heavy	for heavy oxen and bulls
red	-	very heavy	for heaviest cattle
2. Screw on the head-piece (201) tightly to the right. Take care that the annular spring (212) is not distorted. The opening must be opposite to the trigger.
3. Pull out the striking pin (208) by the striking pin nut (209) until the trigger (211) catches audibly. The apparatus is now cocked.
4. The apparatus is firmly to be set with both hands on the skull of the animal - head-piece (201) with trigger (211) and striking pin nut (208) on high - and the shot is to be started by a pressure on the trigger (211). Pay attention that the trigger is completely pressed.
5. If the cartridge-case should get jammed it can be pulled out with the extractor on the trigger (211) by putting it into the groove in the cartridge-magazine (= intermediary piece (202)).
6. ATTENTION! Set the apparatus on the skull of the animals always as firmly as possible, do not set on edge: Make it a point never to hold against your body the lower end of the apparatus out of which projects the bolt (205), at the very least so when examining some possible jamming.
7. If the apparatus fails to go off, proceed as follows: Screw off the head-piece (201) and take out the cartridge. Examine if the striking pin (208) is in order. Otherwise send apparatus to the producer.
8. IN ANY CASE AVOID FREE SHOTS - FIRE TRIAL SHOTS ONLY AGAINST THICK WOODEN SUPPORT!
9. A good functioning of the apparatus is warranted if you use the ammunition you got from us. Ammunition additionally ordered will be promptly delivered.

-2-

B) Cleaning

It is recommendable carefully to clean the apparatus after every use, at any rate so before a long time of non-use, as the residue of powder can be the cause of misfire.

1. Screw off the lock (203).
2. Take out the bolt spring (215).
3. Make the bolt (205) fall forward and pull it out together with the rubber buffer (216). Clean the inside of the gun barrel (204) and the cartridge-magazine (= intermediary piece (202)) with the enclosed brushes and, if necessary, with petroleum; then oil slightly. (Keep the rubber buffer (216) free from oil).
4. Set in back the bolt (205) - rubber buffer (216) - bolt spring (215) in this succession, screw on the lock (203).
5. It is recommendable to rinse the undismounted head-piece (201) in petroleum or in tractor driving-material.
6. Make sure of the right functioning of the apparatus by putting the enclosed polishing-stick (without the brush) instead of the cartridge into the cartridge-magazine and thrusting out the bolt against the pressure of the spring. Then the shooting-bolt must jut out by about 75 mm from the lower end (203) of the apparatus and completely spring back after the slackening of the pressure.

