








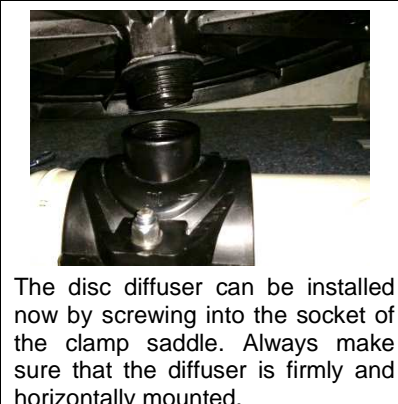


## Installation Instruction – OXYFLEX MT300 type AS

		
<p>Together with the disc diffuser OXYFLEX MT300 type AS, we supply separately the suitable clamp saddle incl. gasket, screw, nut and washer.</p>	<p>The O-ring gasket has to be put into the groove of the upper part of the clamp saddle.</p>	<p>The pipe has to be adjusted that the bores are perpendicular</p>
		
<p>The upper part of the clamp saddle has to be inserted into the existing 20mm bore of the aeration pipe with the supply air connector (16mm) from above.</p>	<p>The lower part of the clamp saddle has to be hooked in the upper part of the clamp saddle.</p>	<p>The lower part of the clamp saddle has to be closed around the pipe.</p>
		
<p>The two clamp parts have to be connected to each other by the screw.</p>	<p>Now the clamp is closed and has to be screwed using the washer and a self-locking nut (10 Nm). The thread of the hexagon screws should be lubricated beforehand to avoid seizing.</p>	<p>Before installing the disc diffuser, take care of the proper used flat gasket (scope of supply together with the disc diffuser).</p>
	<p>The disc diffuser can be installed now by screwing into the socket of the clamp saddle. Always make sure that the diffuser is firmly and horizontally mounted.</p>	